

PARTS CATALOGUE

The Brown Bag Filling Machine Co.

Fitchburg - Massachusetts

U. S. A.

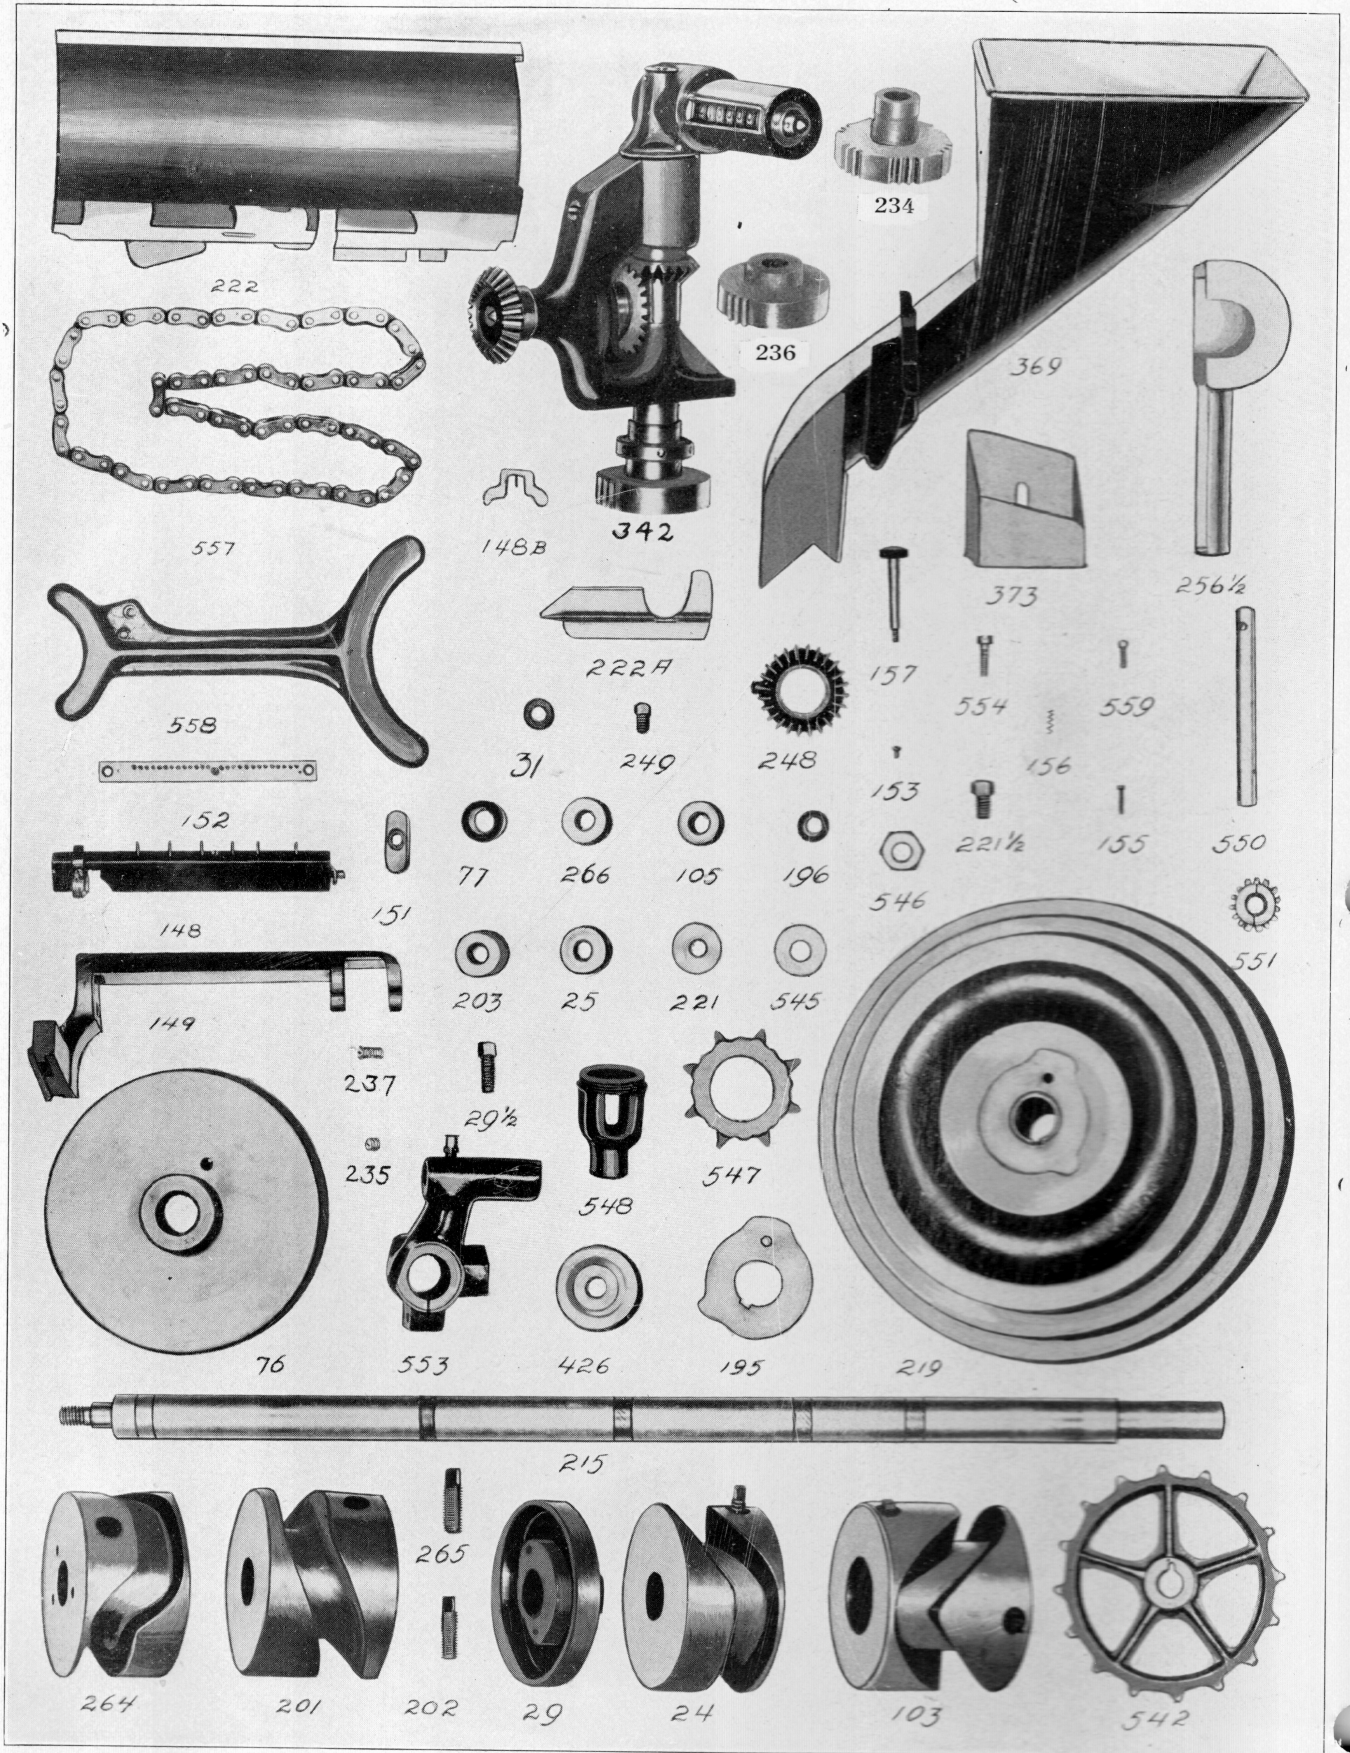


Plate B

For List of Parts See Pages 9, 10 and 11.

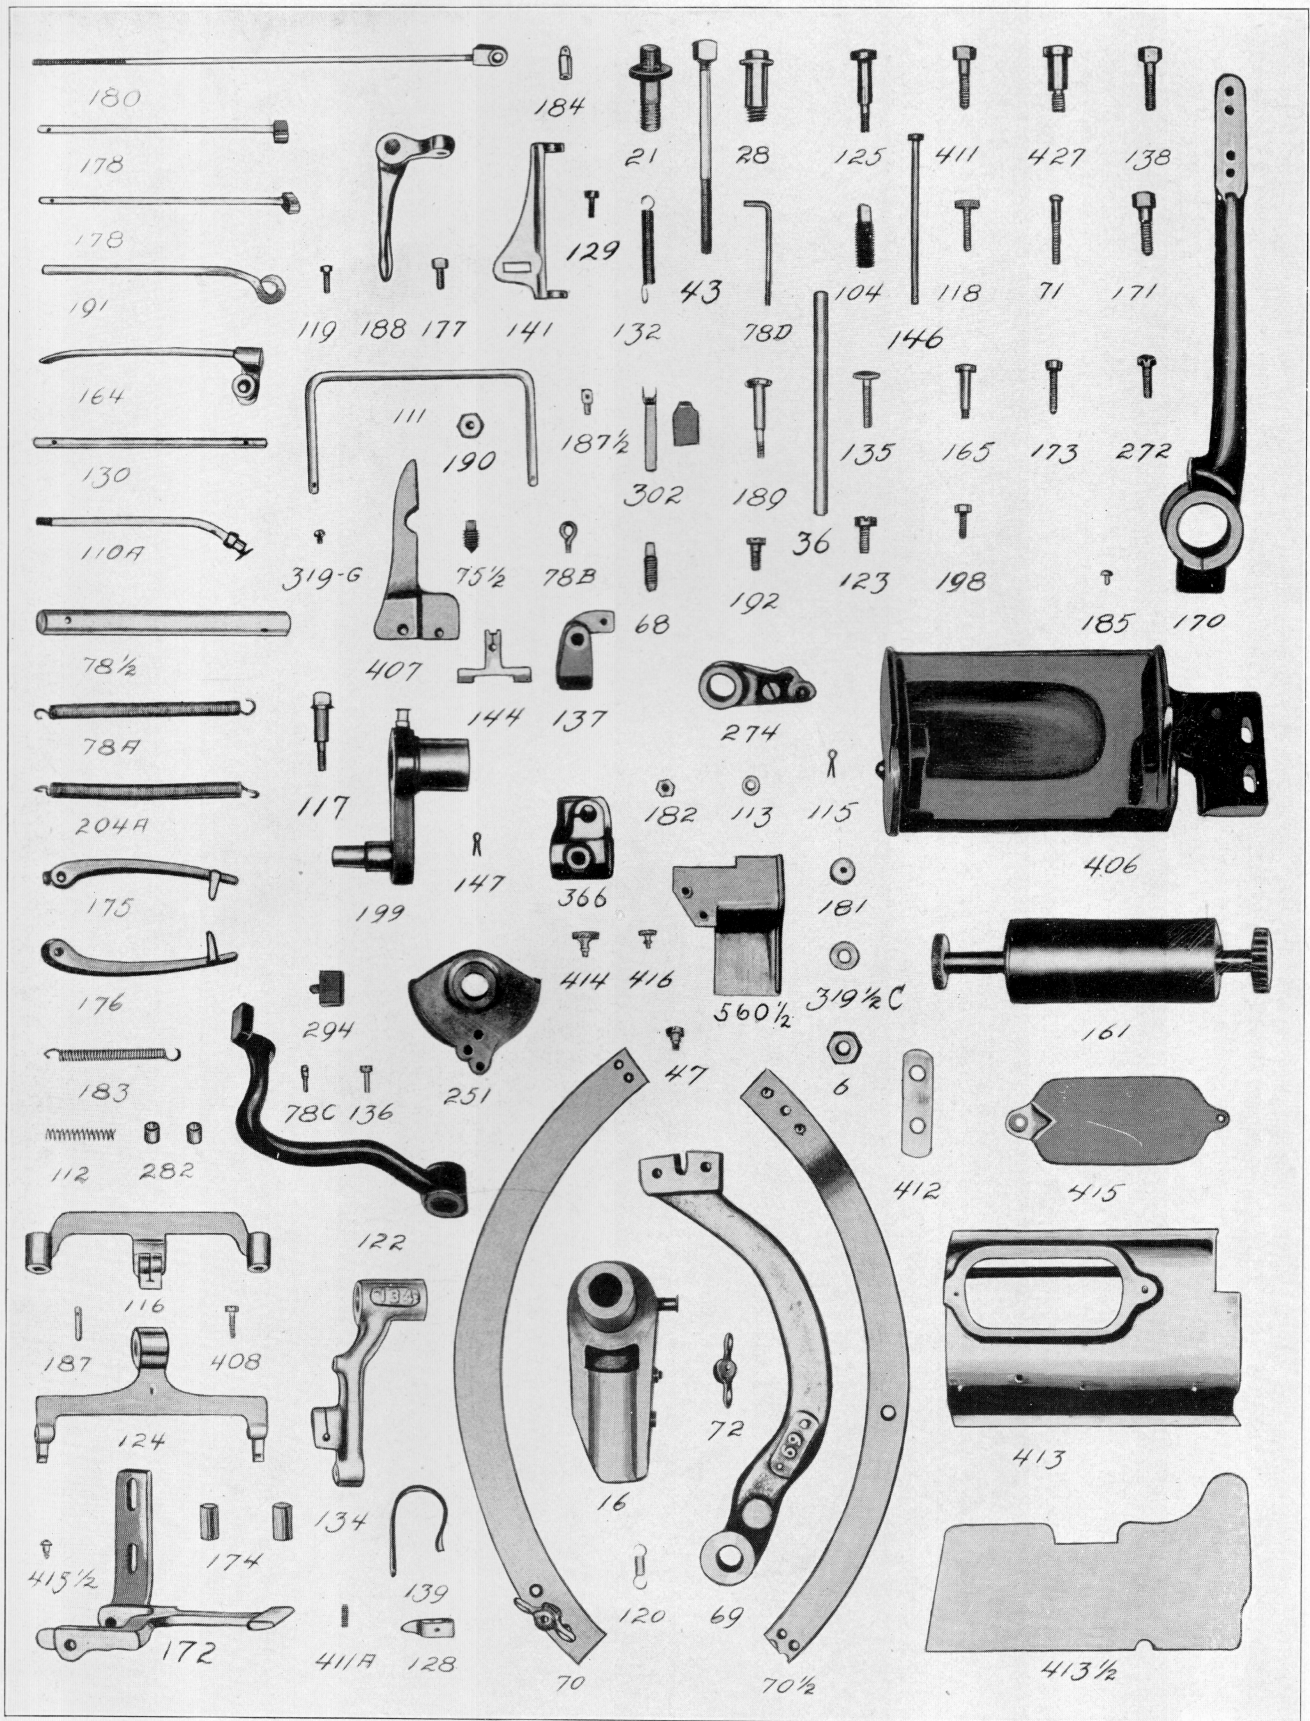


Plate C

For List of Parts See Pages 9, 10 and 11

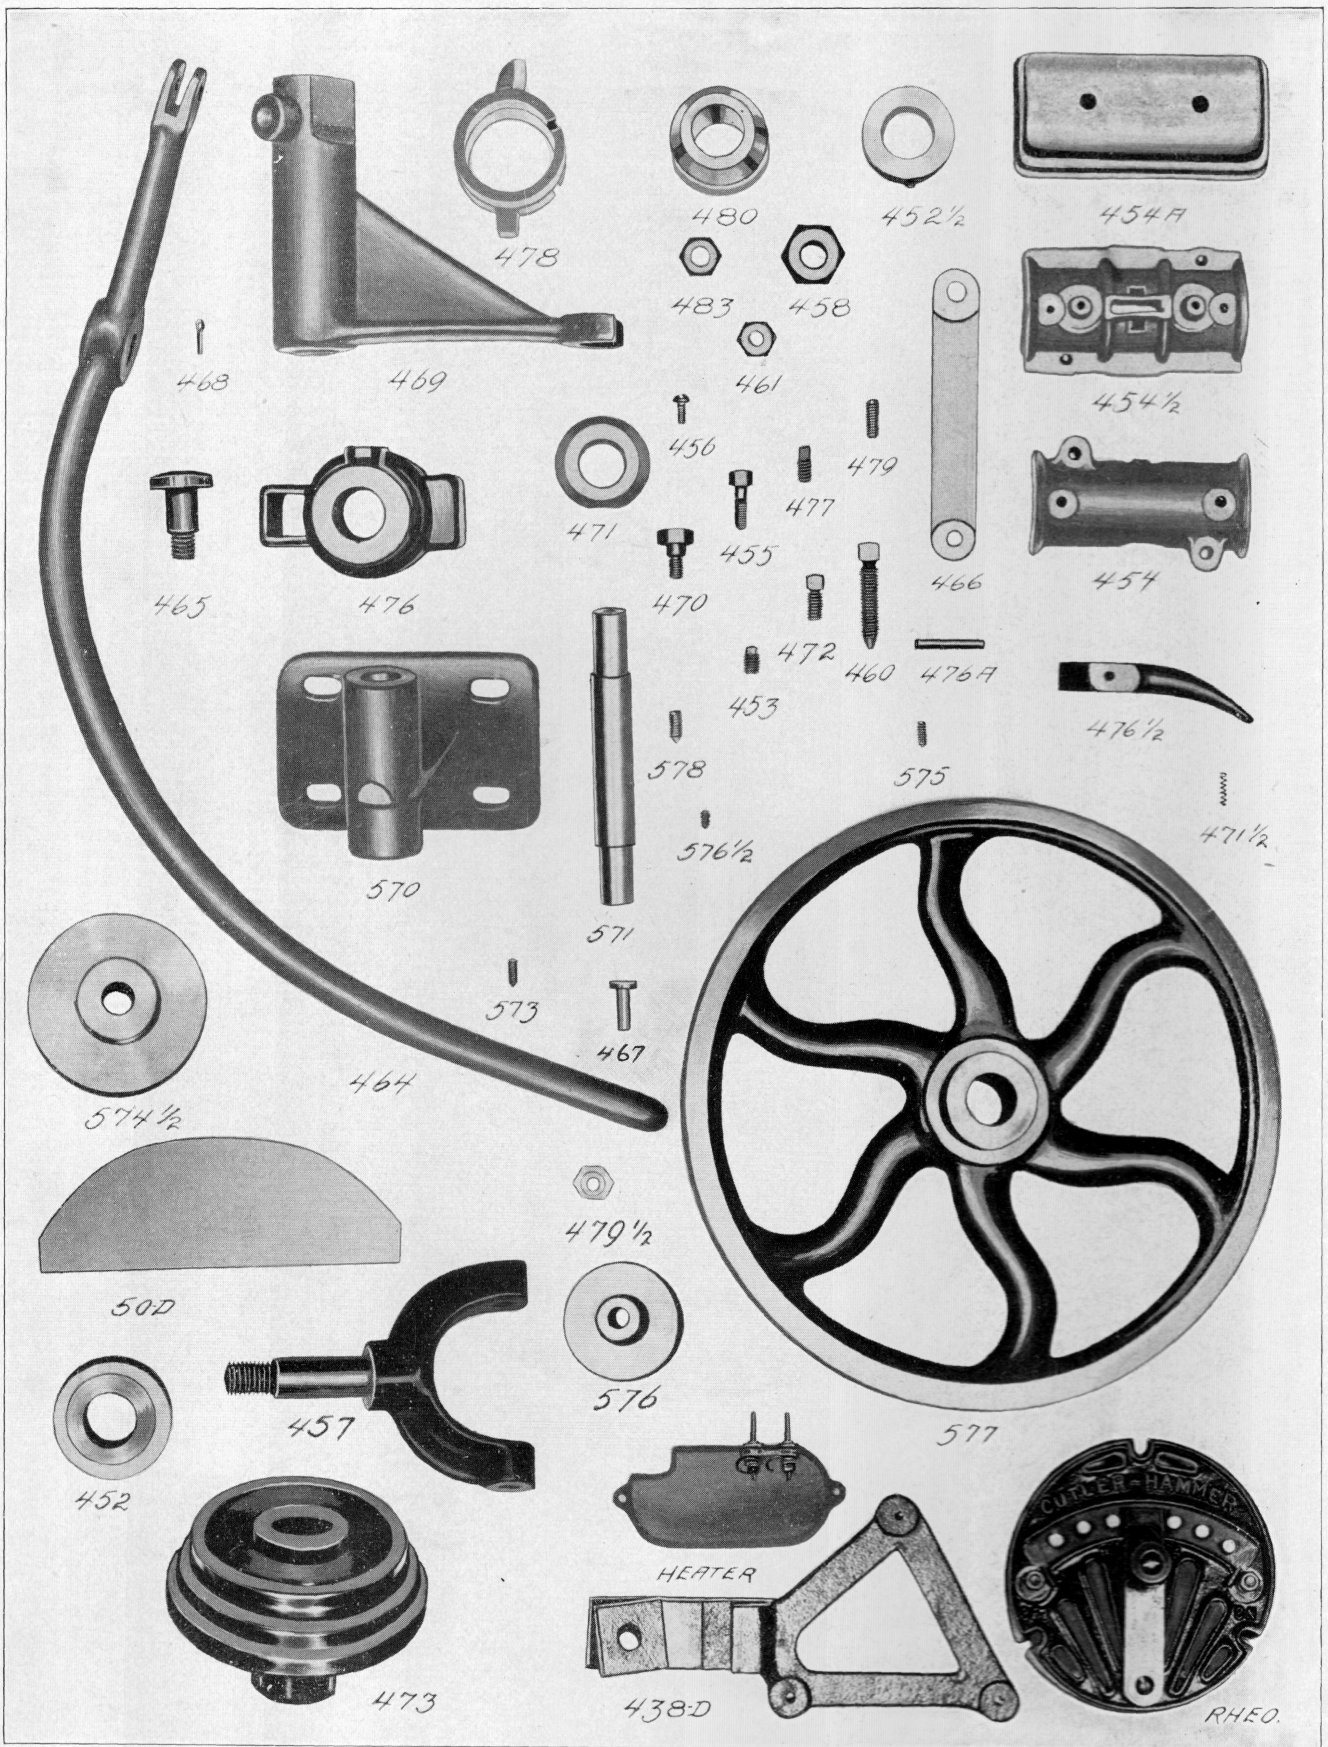


Plate D

For List of Parts See Pages 9, 10 and 11.

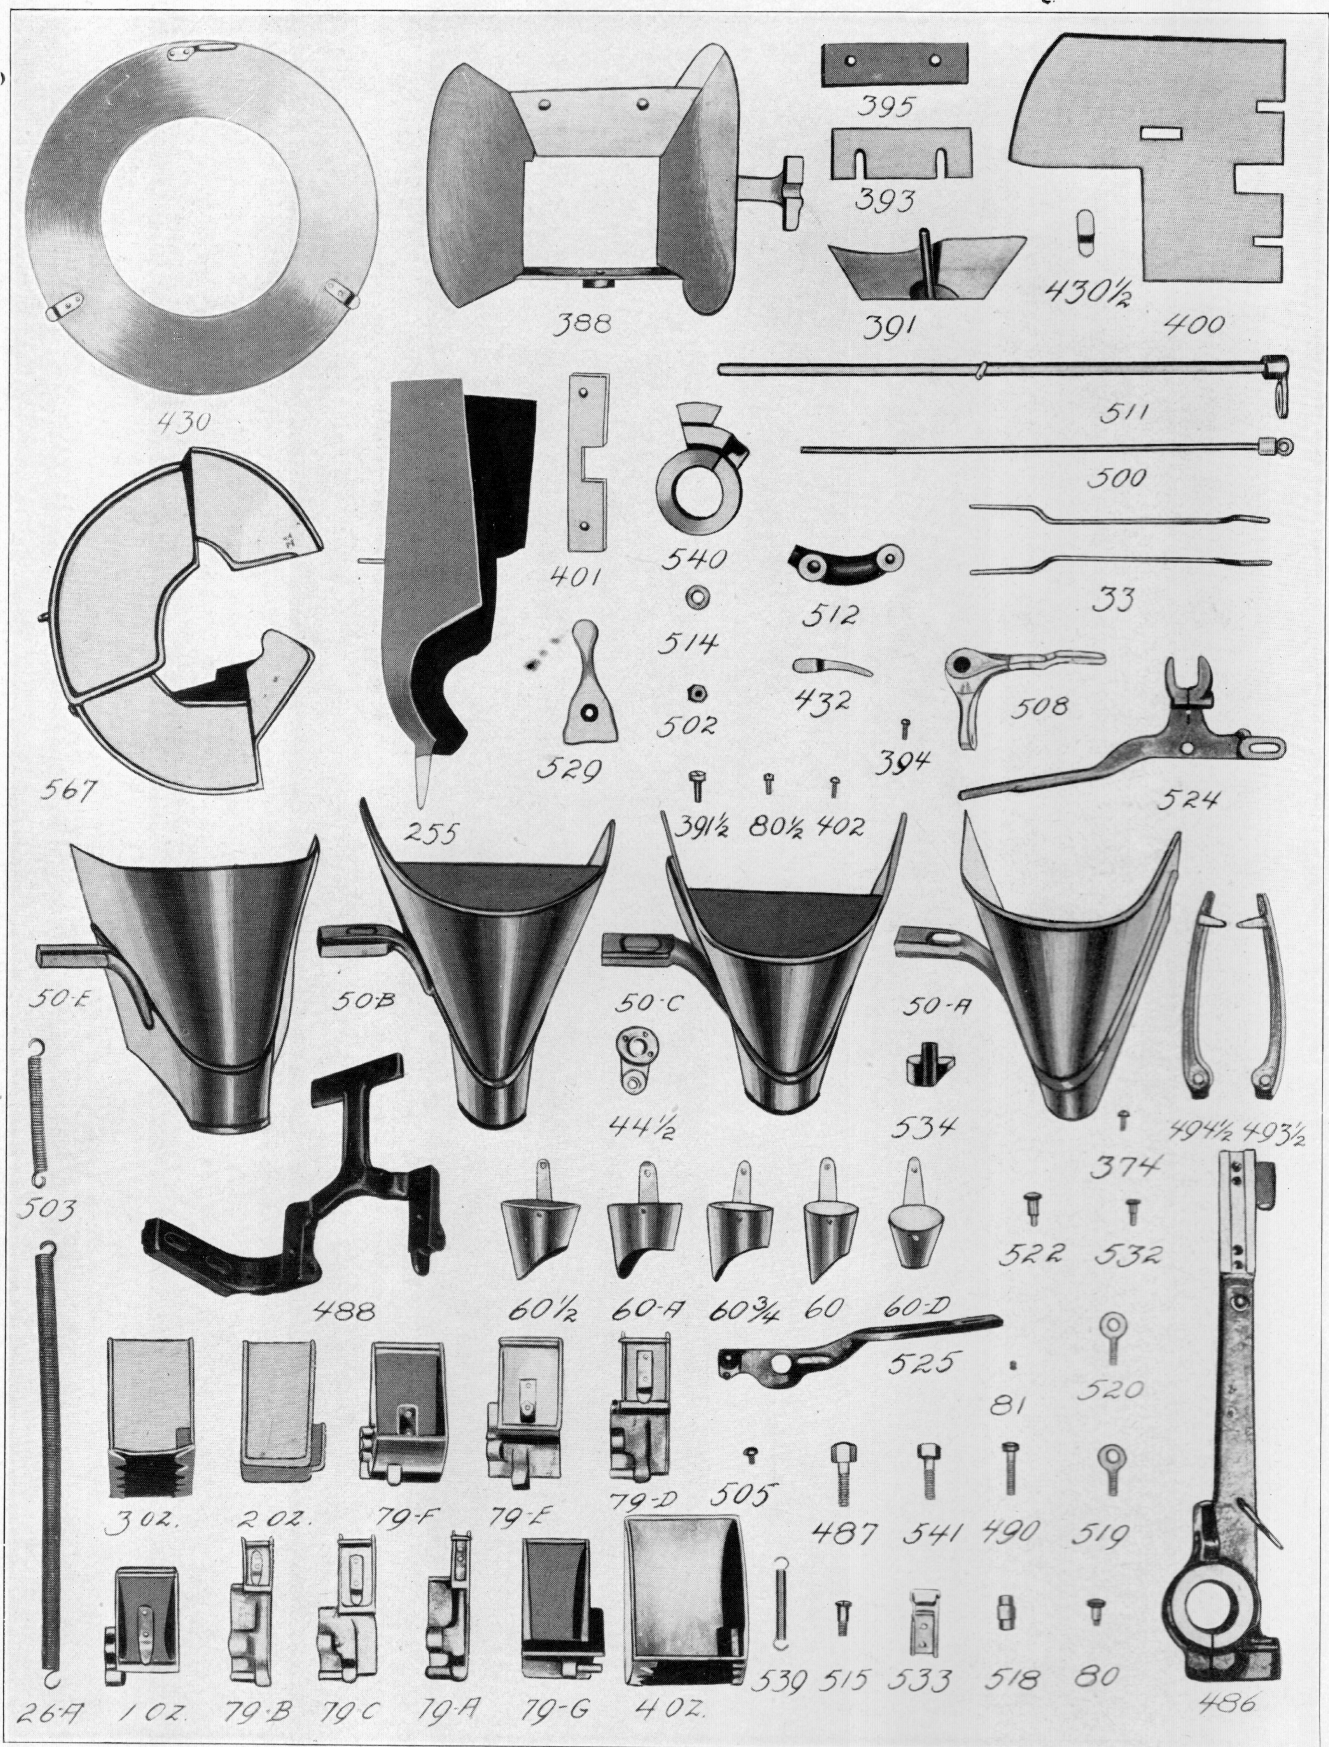


Plate F

For List of Parts See Pages 9, 10 and 11.

LIST OF PARTS



No.	Name of Part	Plate	No.	Name of Part	Plate
1	FRAME	A	78 1/2	FEED ARM SHAFT	C
2	FRAME EXTENSION	A	78A	FEED ARM BALANCE SPRING	C
3	FRAME EXTENSION SCREWS	A	78B	FEED ARM BALANCE SPRING EYE IN ARM	C
4	FRAME EXTENSION ARCH	A	78C	FEED ARM BALANCE SPRING EYE IN FRAME	C
5	FRAME EXTENSION ARCH STUDS	A	78D	FEED ARM BALANCE SPRING HOOK IN ARM	C
6	FRAME EXTENSION ARCH NUTS	C	79A	NO. 1 MEASURE	F
7	FRAME EXTENSION ARCH THUMB NUTS	A	79B	NO. 1 1/2 MEASURE	F
8	FRAME EXTENSION ARCH WASHERS	A	79C	NO. 2 MEASURE	F
9	FRAME EXTENSION ARCH BINDERS	A	79D	NO. 2 1/2 MEASURE	F
10	FRAME EXTENSION ARCH BINDERS LEVER STUDS	A	79E	NO. 3 MEASURE	F
10 1/2	FRAME EXTENSION ARCH CLAMP STUDS	A	79F	NO. 4 MEASURE, SPECIAL 2 OZ.	F
11	TUNNEL ARM	A	79G	NO. 5 MEASURE	F
12	TUNNEL ARM BINDING SCREWS	A	80	MEASURE STUD	F
13	TUNNEL ARM CARRIER	A	80 1/2	MEASURE SCREW	F
14	TUNNEL ARM CARRIER STUD	A	81	MEASURE ADJUSTING SCREWS	F
14 1/2	TUNNEL ARM CARRIER WASHER	A	102	SLIDE	A
15	TUNNEL ARM CARRIER STUD NUT	A	103	SLIDE CAM NO. 5	B
16	TUNNEL ARM LEVER	C	104	SLIDE CAM SET SCREW	C
16A	TUNNEL ARM LEVER GIB	A	105	SLIDE CAM ROLL	B
16B	TUNNEL ARM LEVER GIB SCREWS	A	108	SLIDE GIB	A
16C	TUNNEL ARM LEVER GIB CHECK NUTS	A	109	SLIDE GIB SCREWS	A
17	TUNNEL ARM LEVER STUD	A	110 1/2	SLIDE GIB ADJUSTING SCREWS—SLOTTED	A
18	TUNNEL ARM CAM SET SCREW	A	110A	SLIDE GIB OIL TUBE	C
19	TUNNEL ARM LEVER STUD NUT	A	110B	SLIDE GIB OIL TUBE BRACKET	A
20	TUNNEL ARM LEVER SLIDE BLOCK	A	110C	SLIDE GIB OIL TUBE SCREWS	A
21	TUNNEL ARM LEVER SLIDE STUD	C	111	CLAMP	C
22	TUNNEL ARM LEVER SLIDE STUD NUT	A	112	CLAMP SPRINGS	C
23	TUNNEL ARM LEVER SLIDE STUD WASHER	A	113	CLAMP WASHERS	C
24	TUNNEL ARM CAM NO. 3	B	115	CLAMP COTTER PINS	C
25	TUNNEL ARM CAM ROLL	B	116	CLAMP BRACKET	C
26A	TUNNEL ARM BALANCE SPRING	F	117	CLAMP BRACKET STUD	C
26B	TUNNEL ARM BALANCE SPRING EYE	A	118	CLAMP BRACKET ADJUSTING SCREW	C
26C	TUNNEL ARM BALANCE SPRING EYE IN FRAME	A	119	CLAMP BRACKET BINDING SCREW	C
27	SPREADER FINGER	A	120	CLAMP BRACKET SPRING	C
28	SPREADER FINGER STUD	C	122	CLAMP BRACKET HOLDER OR SUPPORT	C
29	SPREADER FINGER CAM NO. 4	B	123	CLAMP BRACKET HOLDER BINDING SCREW	C
29 1/2	SPREADER FINGER CAM SET SCREW	B	124	FOLDING BLADE	C
31	SPREADER FINGER CAM ROLL	B	125	FOLDING BLADE STUD	C
33	SPREADERS, FULL WIRE	F	125A	FOLDING BLADE STUD NUT	E
35 1/2	SPREADER SHANKS (Short)	A	127	FOLDING BLADE STUD WASHER	E
36	SPREADER SHAFTS	C	128	FOLDING BLADE DOGS	C
37	SPREADER SHAFT COLLARS	A	129	FOLDING BLADE DOG SCREWS	C
39	SPREADER SHANK SET SCREWS	A	130	FOLDING BLADE ROD	C
40	SPREADER SET SCREWS	A	131	FOLDING BLADE ROD COTTER PINS	E
41	SPREADER GEAR (With Hub)	A	132	FOLDING BLADE SPRINGS	C
43	SPREADER PLUNGER	C	134	FOLDING BLADE SUPPORT	C
44	SPREADER PLUNGER GEAR	A	135	FOLDING BLADE SUPPORT ADJUSTING SCREW	C
44 1/2	SPREADER PLUNGER GEAR SHANK	F	136	FOLDING BLADE SUPPORT BINDING SCREW	C
44A	SPREADER PLUNGER GEAR SCREW	E	137	FOLDING BLADE SUPPORT STOP	C
45	SPREADER PLUNGER SPRING	A	138	FOLDING BLADE SUPPORT STOP BINDING SCREW	C
45A	SPREADER PLUNGER SPRING WASHER	A	139	FOLDING BLADE SUPPORT STOP SPRING	C
46	SPREADER PLUNGER SOCKET	A	140	FOLDING BLADE SUPPORT STOP SPRING SCREW	C
47	SPREADER PLUNGER STUD	C	141	STAMP BRACKET	E
50A	TUNNEL SMALL NO. 1	F	142	STAMP BRACKET SCREW	E
50B	TUNNEL LARGE NO. 2	F	143	STAMP BRACKET WASHER	E
50C	TUNNEL LARGE NO. 3	F	144	STAMP BRACKET SLIDE	E
50D	TUNNEL EXTENSION	D	145	STAMP BRACKET SLIDE BINDING SCREW	E
50E	TUNNEL 4 OZ. NO. 4	F	146	STAMP BRACKET SLIDE ROD	C
51	TUNNEL SCREW	A	147	STAMP BRACKET SLIDE ROD COTTER PIN	C
52	TUNNEL WASHER	A	148	SPOTTER BAR—COMPLETE	B
53	TUNNEL BLOCK	A	148B	SPOTTER HEAD CLAMP	B
54	TUNNEL BLOCK SCREWS	A	148C	SPOTTER HEAD CLAMP SCREWS	E
60	TUNNEL NOSE NO. 1	F	149	SPOTTER BRACKET	B
60 1/2	TUNNEL NOSE NO. 2	F	150	SPOTTER BRACKET SCREW	E
60 3/4	TUNNEL NOSE NO. 4	F	151	SPOTTER BRACKET SCREW PLATE	B
60A	TUNNEL NOSE NO. 3	F	152	SPOTTER PLATES	B
60D	TUNNEL NOSE NO. 1/2	F	153	SPOTTER PLATE SCREWS—FLAT HEAD	B
68	FEED ARM LEVER CAM SET SCREW	C	153A	SPOTTER PLATE SCREWS—FILLISTER HEAD	E
69	FEED ARM	C	155	SPOTTER PLUNGERS 9-16 inches	B
70	FEED ARM EXTENSION	C	156	SPOTTER PLUNGER SPRINGS	B
70 1/2	FEED ARM OFFSET	C	157	SPOTTER THUMB SCREWS	B
71	FEED ARM EXTENSION SCREW	C	161	GLUE ROLL	C
72	FEED ARM EXTENSION THUMB NUT	C	164	GLUE ROLL RATCHET PAWL HEAD	C
74	FEED ARM LEVER	A	165	GLUE ROLL RATCHET PAWL STUD	C
75 1/2	FEED ARM LEVER SET SCREW (Square head)	C	170	BAG CARRIER ARM	C
76	FEED ARM LEVER CAM NO. 7	B	171	BAG CARRIER ARM BINDER SCREW	C
77	FEED ARM LEVER CAM ROLL	B	172	BAG CARRIER ARM HEAD	C

No.	Name of Part	Plate	No.	Name of Part	Plate
173	BAG CARRIER ARM HEAD SCREWS	C	256 1/2	INDICATOR SHIELD	B
174	BAG CARRIER ARM HEAD CUSHIONS	C	257	BASE	E
175	BAG CARRIER ARM FINGER LEFT HAND INSIDE	C	258	BASE STUD	A
176	BAG CARRIER ARM FINGER RIGHT HAND OUTSIDE	C	259	BASE STUD SCREW	A
177	BAG CARRIER ARM FINGER SET SCREWS	C	260	BASE STUD WASHER	A
178	BAG CARRIER ARM FINGER SHAFT	(C)	261	BASE LEVER	A
180	BAG CARRIER ARM FINGER SHAFT CONNECTION	(C)	262 1/2	BASE LEVER STUD WASHER	A
181	BAG CARRIER ARM FINGER SHAFT CONNECTION ADJUSTING NUT	(C)	263	BASE LEVER STUD NUT	A
182	BAG CARRIER ARM FINGER SHAFT CONNECTION CHECK NUT	(C)	264	BASE LEVER CAM NO. 8	B
183	BAG CARRIER ARM FINGER SHAFT CONNECTION SPRING	(C)	265	BASE LEVER CAM SET SCREW	B
184	BAG CARRIER ARM FINGER SHAFT CONNECTION SPRING COLLAR	(C)	266	BASE LEVER CAM ROLL	B
185	BAG CARRIER ARM FINGER SHAFT CONNECTION SPRING COLLAR SET SCREW	(C)	268	BASE SLIDE	E
187	BAG CARRIER ARM SHAFT CONNECTION SPRING EYE	C	269	BASE SLIDE ADJUSTING SCREW	E
187 1/2	BAG CARRIER ARM SHAFT CONNECTION SPRING EYE ON ARM	(C)	270A	BASE SLIDE ADJUSTING BINDING SCREW	E
188	BAG CARRIER ARM ELBOW LEVER	C	271	BASE SLIDE YOKE	E
189	BAG CARRIER ARM ELBOW LEVER STUD	C	272	BASE SLIDE YOKE SCREW	C
190	BAG CARRIER ARM ELBOW LEVER STUD NUT	C	274	BASE SLIDE YOKE LEVER	C
191	BAG CARRIER ARM PLUNGER	C	275	BASE SLIDE YOKE LEVER STUD	E
192	BAG CARRIER ARM PLUNGER STUD	C	276	BASE SLIDE YOKE LEVER PAWL SHAFT	E
193	BAG CARRIER ARM PLUNGER LEVER	A	277	BASE SLIDE YOKE LEVER PAWL SHAFT PAWLS	E
195	BAG CARRIER ARM PLUNGER LEVER CAM NO. 1	B	282	BASE SLIDE YOKE LEVER SHAFT COLLARS	C
196	BAG CARRIER ARM PLUNGER LEVER CAM ROLL	B	283	BASE FOOT—LEFT HAND	E
198	BAG CARRIER ARM PLUNGER LEVER CAM SCREW	C	283 1/2	BASE FOOT—RIGHT HAND	E
199	BAG CARRIER ARM LEVER	C	284	BASE FOOT SCREWS	E
200	BAG CARRIER ARM LEVER FULCRUM STUD	A	286	BASE FOOT SEPARATORS	E
201	BAG CARRIER ARM LEVER CAM NO. 2	B	288	GUIDE BOX SIDE NAME PLATE	E
202	BAG CARRIER ARM LEVER CAM SET SCREW	B	288 1/2	GUIDE BOX SIDE PATENT	E
203	BAG CARRIER ARM LEVER CAM ROLL	B	289	GUIDE BOX SIDE ADJUSTING SCREW—DOUBLE HEAD	E
204A	BAG CARRIER ARM BALANCE SPRING	C	289 1/2	GUIDE BOX SIDE ADJUSTING SCREW—SINGLE HEAD	E
205	LIP HOLDER	E	290	GUIDE BOX SIDE ADJUSTING SCREW HEAD WITH HUB	E
206	LIP HOLDER STUD	E	293	GUIDE BOX SIDE CENTER ADJUSTING SCREW	E
207	LIP HOLDER THUMB NUT	E	294	GUIDE BOX SIDE CENTER ADJUSTING SCREW BLOCK	C
208	LIP HOLDER HEAD	E	297	GUIDE BOX SIDE FOOT HOLDER	E
209	LIP HOLDER HEAD ADJUSTING SCREW	E	298	GUIDE BOX SIDE FOOT HOLDER SCREWS	E
209 1/2	LIP HOLDER HEAD ADJUSTING SCREW BINDER SCREW	E	299	GUIDE BOX SIDE PLATE—REAR	E
211	LIP HOLDER HEAD ADJUSTING SCREW STUD	E	299 1/2	GUIDE BOX SIDE PLATE—FRONT	E
212	LIP HOLDER BRACKET	E	300	GUIDE BOX SIDE PLATE THUMB SCREWS	E
213	LIP HOLDER BRACKET SCREW	E	301	GUIDE BOX SIDE PLATE THUMB SCREW WASHER	E
214	LIP HOLDER BRACKET WASHER	E	302	GUIDE BOX SIDE ADJUSTING SCREW COVERS	C
215	MAIN SHAFT WITH SHOULDER	B	303	GUIDE BOX SIDE ADJUSTING SCREW COVER SCREWS	E
216	MAIN SHAFT BEARING WITH EAR	A	304	GUIDE BOX SIDE STOP SCREWS (LONG)	E
217	MAIN SHAFT BEARING WITHOUT EAR	A	309	GUIDE BOX DOWN HOLDS	E
218	MAIN SHAFT BEARING SCREWS	A	310	GUIDE BOX DOWN HOLD THUMB SCREWS	E
219	MAIN SHAFT PULLEY	B	311	GUIDE BOX DOWN HOLD THUMB SCREW WASHERS	E
221	MAIN SHAFT PULLEY WASHER	B	312	GUIDE BOX CROSS TIE WITH ADJUSTMENT	D
221 1/2	MAIN SHAFT PULLEY CAP SCREW	B	313	GUIDE BOX CROSS TIE THUMB SCREWS	E
222	MAIN SHAFT CAM SHIELD	B	319	FOLLOWER BASE	E
222A	MAIN SHAFT CAM SHAFT SHIELD	B	319A	FOLLOWER CROSS BAR	E
222B	MAIN SHAFT CAM SHIELD HOOK	A	319B	FOLLOWER ROD	E
223	CORE	E	319B2	FOLLOWER ROD	E
224	CORE STUD	A	319B3	FOLLOWER ROD SLEEVE	E
225	CORE STUD NUT	A	319B4	FOLLOWER ROD CARRIER	E
226	CORE STUD SCREW	A	319B5	FOLLOWER ROD OPEN SPRING	E
227	CORE STUD WASHER	A	319C	FOLLOWER ROD COLLAR SCREW (1/4x6—32 HDLS.)	E
223	CORE HEADS	E	319D	FOLLOWER HINGE JOINTS	E
229	CORE HEAD SCREWS	E	319G	FOLLOWER ROD HEAD SCREWS (1/4x6x32 Flat Head)	C
230	CORE HEAD ROLLS—LONG	E	319H	FOLLOWER ROD CONE	E
231	CORE HEAD ROLLS—SHORT	E	319J	FOLLOWER ROD CONE PAWL	E
232	CORE HEAD ROLL SPINDLES	E	319K	FOLLOWER ROD CONE PAWL SPRING	E
234	GENEVA STOP	B	319R	FOLLOWER HEAD PLUNGER STARTER	E
235	GENEVA STOP SET SCREWS	B	319S	FOLLOWER SPRING (SIDE SPRING)	E
236	GENEVA GEAR	B	319 1/2	FOLLOWER BASE SCREWS	E
237	GENEVA GEAR SET SCREWS	B	319 1/2A	FOLLOWER ROD GUIDE SCREWS	E
248	MAIN SHAFT DRIVING GEAR	B	319 1/2C	FOLLOWER BASE COLLAR	C
249	MAIN SHAFT DRIVING GEAR SET SCREWS	B	319 1/2D	FOLLOWER HINGE JOINT	E
250	INDICATOR GEAR GUARD	A	319 1/2E	FOLLOWER HINGE JOINT SCREWS	E
251	INDICATOR GEAR GUARD SEGMENT	C	319 1/2F NO. 1	FOLLOWER PLATE NO. 1	E
254	INDICATOR GUARD SEGMENT STUD	E	319 1/2F NO. 2	FOLLOWER PLATE NO. 2	E
255	INDICATOR BRACKET GEAR SHIELD	F	319 1/2F NO. 3	FOLLOWER PLATE NO. 3	E
			319 1/2G	FOLLOWER CARRIER SCREW	E
			342	INDICATOR COMPLETE	B
			366	DELIVERY BOX ROD SLEEVE	C
			367	DELIVERY BOX ROD SLEEVE SET SCREW	E
			368	DELIVERY BOX ROD SLEEVE BINDER SCREW	E

No.	Name of Part	Plate	No.	Name of Part	Plate
369	CHUTE—NEW STYLE	B	502	INDENTING ARM FINGER SHAFT CONNEC- TION CHECK NUT	F
373	CHUTE EXTENSION	B	503	INDENTING ARM FINGER SHAFT CONNEC- TION SPRING	F
374	CHUTE EXTENSION SCREW	F	504	INDENTING ARM FINGER SHAFT CONNEC- TION SPRING COLLAR	E
388	PAN	F	505	INDENTING ARM FINGER SHAFT CONNEC- TION SPRING COLLAR SET SCREW	F
391	PAN ADJUSTMENT SIDE	F	508	INDENTING ARM ELBOW LEVER	F
391 1/2	PAN ADJUSTMENT SIDE BINDER SCREW	F	511	INDENTING ARM SHAFT	F
393	PAN SCRAPERS—FRONT, RUBBER	F	512	INDENTING ARM SHAFT CAM CRANK	F
394	PAN SCRAPER SCREWS (3/8-8-32 FIL. HD.)	F	514	INDENTING ARM SHAFT CAM ROLL	F
395	PAN SCRAPER SCREW PLATE (BRASS)	F	515	INDENTING ARM SHAFT CAM ROLL STUD	F
400	PAN APRON—RUBBER	F	518	INDENTING ARM SHAFT TURNBUCKLE	F
401	PAN APRON PLATE	F	519	INDENTING ARM SHAFT TURNBUCKLE RIGHT HAND SCREW	F
402	PAN APRON SCREWS (3/8-8-32 RD. HD.)	F	520	INDENTING ARM SHAFT TURNBUCKLE LEFT HAND SCREW	F
406	GUM POT	C	521	INDENTING ARM SHAFT TURNBUCKLE CHECK NUT	E
407	GUM POT ARM	C	522	INDENTING ARM SHAFT TURNBUCKLE STUD	F
403	GUM POT ARM SCREW (1/8-10-32 FIL. HD.) BRASS	C	523	INDENTING ARM SHAFT TURNBUCKLE STUD NUT	E
411	GUM POT SCREWS (5/16-18-1 1/8-1 1/2 HEX. HD.)	C	524	INDENTING ARM LEFT HAND INDENTING FINGER	F
411A	GUM POT SCREWS (14-24 HEADLESS)	C	525	INDENTING ARM RIGHT HAND INDENTING FINGER OFFSET	F
412	GUM POT SCREW PLATE	C	526	INDENTING ARM LEFT HAND INDENTING FINGER ADJ. SCREW	E
413	GUM POT COVER	C	529	INDENTING ARM LEFT HAND INDENTING FINGER ADJ. ADJUSTER	F
413 1/2	GUM POT COVER EXTENSION	C	530	INDENTING ARM LEFT HAND INDENTING FINGER ADJUSTER SCREWS	E
414	GUM POT COVER KNOB	C	532	INDENTING ARM INDENTING FINGER STUDS	F
415	GUM POT COVER SLIDE	C	533	INDENTING ARM INDENTING FINGER SMALL INDENTERS	F
415 1/2	GUM POT COVER SLIDE (RIVET) STUD	C	534	INDENTING FINGER LEFT HAND HALF ROUND INDENTERS	F
416	GUM POT COVER SLIDE THUMB SCREW	C	535	INDENTING FINGER INDENTING SCREWS	E
426	HOPPER RING ROLLS IDLER	B	537	INDENTING FINGER STOP SCREWS	E
427	HOPPER RING ROLL STUD	C	538	INDENTING FINGER STOP SCREW CHECK NUT	E
430	HOPPER FRONT—CELLULOID	F	539	INDENTING FINGER SPRING	F
430 1/2	HOPPER FRONT—CELLULOID BINDERS (CLAMPS)	F	540	INDENTING FINGER CAM	F
432	HOOKS, HOPPER FRONT BINDER	D	541	INDENTING FINGER CAM BINDING SCREW	F
438D	RHEOSTAT BRACKET—NEW	F	542	LARGE SPROCKET	B
452	COUNTERSHAFT COLLARS	D	545	LARGE SPROCKET WASHER	B
452 1/2	COUNTERSHAFT COLLAR—NEW STYLE	D	546	LARGE SPROCKET NUT	B
453	COUNTERSHAFT COLLAR SET SCREWS	D	547	SMALL SPROCKET	B
454	COUNTERSHAFT BOX PART NO. 1	D	548	SMALL SPROCKET SPIDER	B
454A	COUNTERSHAFT BOX DRIP PANS	D	549	SMALL SPROCKET SPIDER TAPER PIN NO. 2	A
454 1/2	COUNTERSHAFT BOX PART NO. 2	D	550	SMALL SPROCKET SPIDER SHAFT	B
455	COUNTERSHAFT BOX CAP SCREWS	D	551	SMALL SPROCKET SPIDER SHAFT GEAR	B
456	COUNTERSHAFT BOX DRIP PAN SCREWS	D	553	SMALL SPROCKET BRACKET	B
457	COUNTERSHAFT HANGERS	D	554	SMALL SPROCKET BRACKET BINDING SCREWS	B
458	COUNTERSHAFT HANGER NUTS (3/4 HEX. S. F.)	D	556A	SMALL SPROCKET BRACKET HDLS. SCREW	A
460	COUNTERSHAFT HANGER PIVOT SCREWS	D	557	SPROCKET CHAIN	B
461	COUNTERSHAFT HANGER PIVOT SCREW CHECKNUT	D	558	SPROCKET CHAIN GUARD	B
464	COUNTERSHAFT SHIPPER LEVER	D	559	SPROCKET CHAIN GUARD SCREWS	B
465	COUNTERSHAFT SHIPPER LEVER STUD	D	560	RUBBER ROLL SHIELD—1 PIECE	E
466	COUNTERSHAFT SHIPPER LEVER CONNEC- TION	D	560 1/2	RUBBER ROLL SHIELD—1 PIECE SMALL	C
467	COUNTERSHAFT SHIPPING LEVER CONNEC- TION STUD	D	561	RUBBER ROLL SHIELD SCREWS 8-32-1/4 RIGHT HAND	E
468	COUNTERSHAFT SHIPPER LEVER CONNEC- TION COTTER PIN	(D)	562	RUBBER ROLL SPRINGS	E
469	COUNTERSHAFT SHIPPER FORK	D	563	RUBBER ROLL SPRINGS SCREWS 4-32	E
470	COUNTERSHAFT SHIPPER FORK STUD	D	567	CAM SHIELDS FOR NO. 7 AND NO. 8 CAMS	F
471	COUNTERSHAFT SHIPPER FORK COLLAR	D	570	BRACKET	D
471 1/2	FINGER SPRING	D	571	BRACKET SHAFT	D
472	COUNTERSHAFT SHIPPER FORK COLLAR SET SCREW	D	573	HEADLESS SET SCREW	D
473	COUNTERSHAFT GROOVED WHEEL	D	574 1/2	SMALL GROOVED PULLEY ON BRACKET	D
476	COUNTERSHAFT FRICTION BOX	D	575	HEADLESS SET SCREW	D
476A	COUNTERSHAFT FRICTION BOX FINGER PIN	D	576	SMALL GROOVED PULLEY ON MOTOR	D
476 1/2	COUNTERSHAFT FRICTION BOX FINGER	D	576 1/2	SMALL GROOVED PULLEY SET SCREW	D
477	COUNTERSHAFT FRICTION BOX SET SCREWS	D	577	LARGE GROOVED PULLEY ON COUNTER- SHAFT	D
478	COUNTERSHAFT FRICTION BOX RING	D	578	SET SCREW	D
479	COUNTERSHAFT FRICTION BOX RING SET SCREWS	D	1 OZ. MEASURE	F	
479 1/2	COUNTERSHAFT FRICTION BOX RING SET SCREW NUTS	D	2 OZ. MEASURE	F	
480	COUNTERSHAFT FRICTION CAM	D	3 OZ. MEASURE	F	
483	COUNTERSHAFT BRACE PIPE ROD NUTS 1/2 HEX.	D	4 OZ. MEASURE	F	
486	INDENTING ARM	F	HEATER	D	
487	INDENTING ARM BINDING SCREW	F	RHEOSTAT	D	
490	INDENTING ARM HEAD SCREW	F			
493 1/2	INDENTING ARM FINGER (LONG RIGHT)	F			
488	INDENTING ARM HEAD (LONG)	F			
494 1/2	INDENTING ARM FINGER (LONG LEFT)	F			
500	INDENTING ARM FINGER SHAFT CONNEC- TION	F			
501	INDENTING ARM FINGER SHAFT CONNEC- TION ADJUSTING NUT	E			